


零件样本

Parts Book

1、机壳分组件 Arm Bed Components	13
2、上轴、针杆分组件 Main Shaft & Thread Bar Components	15
3、压料分组件 Presser Bar Components	17
4、送料分组件 Feed Mechanism Components	19
5、送料调节分组件 Feed Regulating Components	21
6、弯针勾线分组件 Looper Thread Retainer Complete	23
7、挑线、松线、夹线分组件 Thread Take-up, Tension, And Tension Releasing Assembly ..	25
8、润滑分组件 Lubrication Components	28
9、油盘、膝抬压脚分组 Oil Reservoir & Knee Lifter Components	29
10、机头附件 Machine Head Accessories	30
11、四线团架分组件 Quadruple-thread Spool Stand Asm	31
12、高速单针链缝机 Model One-needle High Speed Chainstitcher	32
13、双针双列与双针单列零件变化表 List Of Parts Change	33
14、双针双列、双针单列附件一览表 List Throat Of & its Accessories	34
15、高速三针链缝机 Model Three-needle High Speed Chainstitcher	35

(本样本中图样、件号、名称、结构仅供参考,如有变动,以产品实物为准)


1. 机壳分组件 Arm bed components

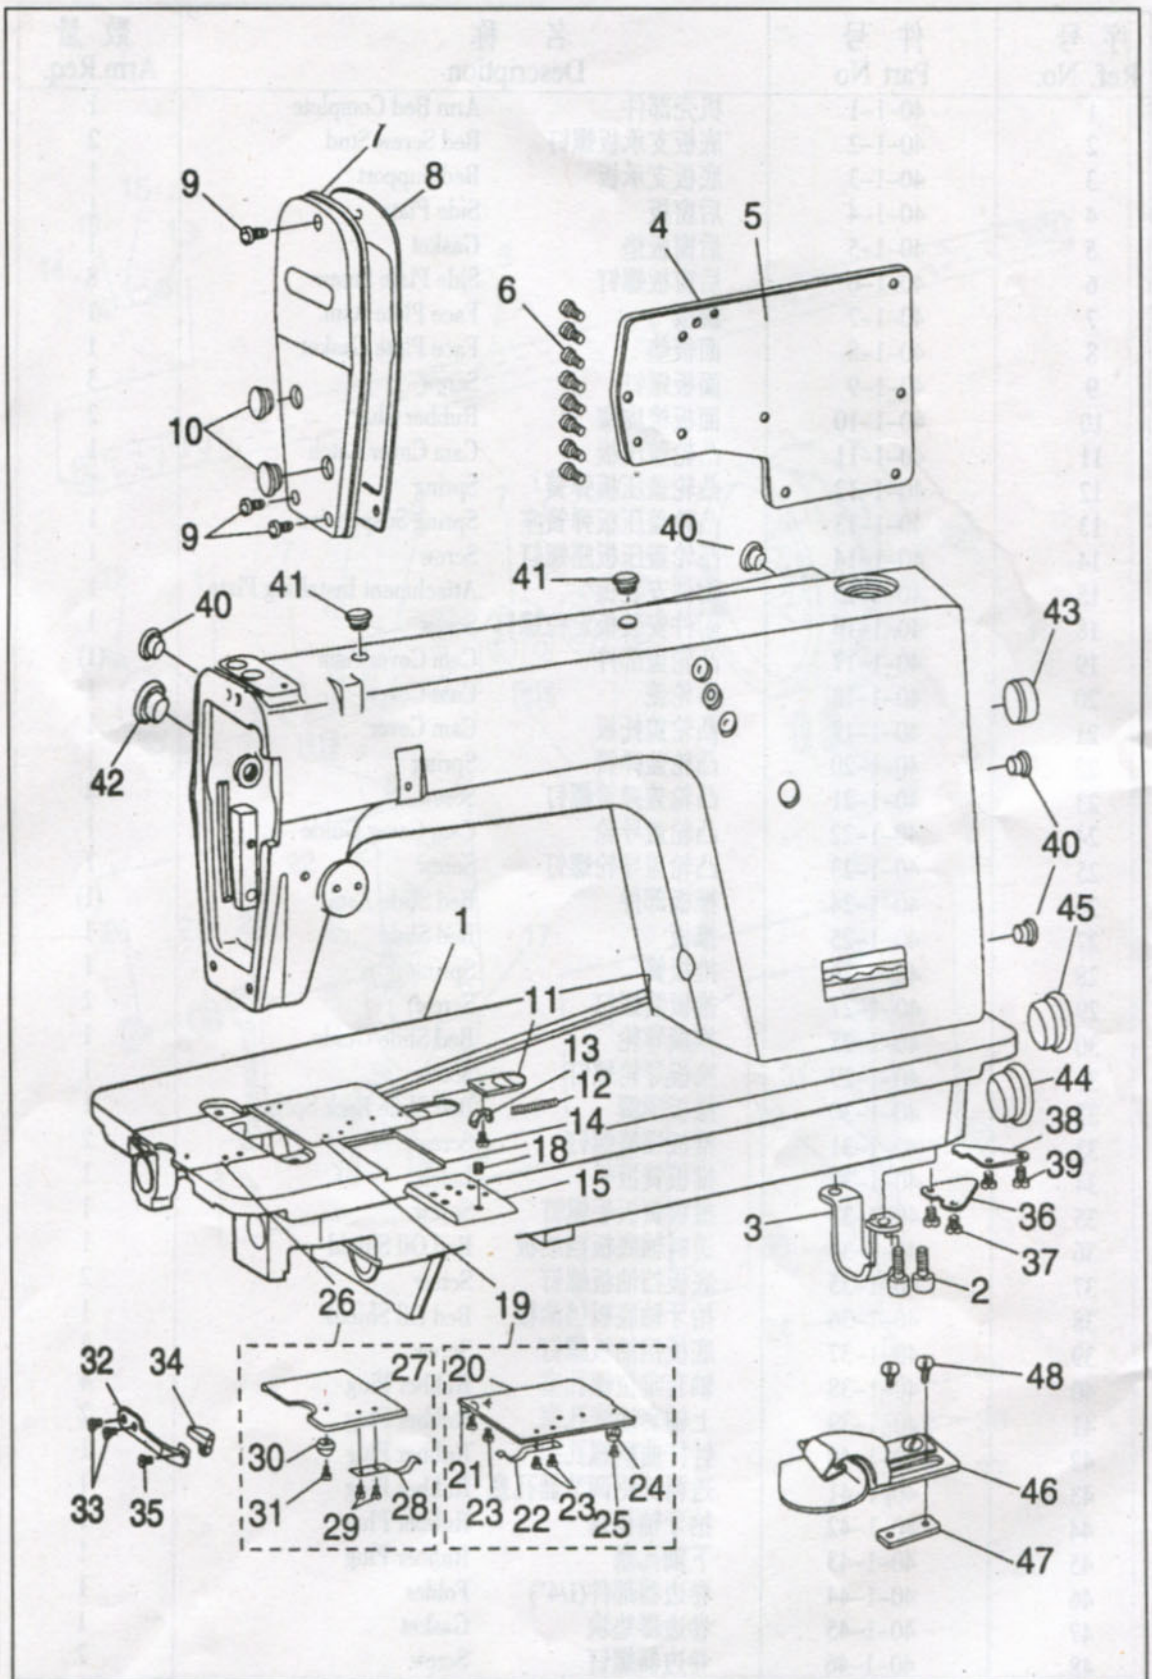

1. 机壳分组件 Arm bed components

序号 Ref. No.	件号 Part No	名称 Description	数量 Arm.Req.
1	40-1-1	机壳部件 Arm Bed Complete	1
2	40-1-2	底板支承板螺钉 Bed Screw Stud	2
3	40-1-3	底板支承板 Bed Support	1
4	40-1-4	后窗板 Side Plate	1
5	40-1-5	后窗板垫 Gasket	1
6	40-1-6	后窗板螺钉 Side Plate Screw	8
7	40-1-7	面板 Face Plate Asm.	1
8	40-1-8	面板垫 Face Plate Gasket	1
9	40-1-9	面板螺钉 Screw	3
10	40-1-10	面板橡皮塞 Rubber Plug	2
11	40-1-11	凸轮盖压板 Cam Cover Latch	1
12	40-1-12	凸轮盖压板弹簧 Spring	1
13	40-1-13	凸轮盖压板弹簧座 Spring Suspension	1
14	40-1-14	凸轮盖压板座螺钉 Screw	1
15	40-1-15	附件安装板 Attachment Installing Plate	1
18	40-1-16	附件安装板定位螺钉 Screw	1
19	40-1-17	凸轮盖部件 Cam Cover Asm	(1)
20	40-1-18	凸轮盖 Cam Cover	1
21	40-1-19	凸轮盖托板 Cam Cover	1
22	40-1-20	凸轮盖弹簧 Spring	1
23	40-1-21	凸轮盖弹簧螺钉 Screw	4
24	40-1-22	凸轮盖导轮 Cam Cover Guide	1
25	40-1-23	凸轮盖导轮螺钉 Screw	1
26	40-1-24	推板部件 Bed Slide Asm.	(1)
27	40-1-25	推板 Bed Slide	1
28	40-1-26	推板簧 Spring	1
29	40-1-27	推板簧螺钉 Screw	2
30	40-1-28	推板导轮 Bed Slide Guide	1
31	40-1-29	推板导轮螺钉 Screw	1
32	40-1-30	推板锁簧 Bed Slide Lock Spring	1
33	40-1-31	推板锁簧螺钉 Screw	2
34	40-1-32	推板簧扳手 Latch	1
35	40-1-33	推板簧扳手螺钉 Screw	1
36	40-1-34	送料轴底板挡油板 Bed Oil Shield	1
37	40-1-35	底板挡油板螺钉 Screw	2
38	40-1-36	抬牙轴底板挡油板 Bed Oil Shield	1
39	40-1-37	底板挡油板螺钉 Screw	2
40	40-1-38	轴套定位螺孔塞 Rubber Plug	4
41	40-1-39	上轴套油线孔塞 Rubber Plug	2
42	40-1-40	针杆曲柄螺孔塞 Rubber Plug	1
43	40-1-41	送料针距调节器孔塞 Rubber Plug	1
44	40-1-42	抬牙轴孔塞 Rubber Plug	1
45	40-1-43	下轴孔塞 Rubber Plug	1
46	40-1-44	卷边器部件(1/4") Folder	1
47	40-1-45	卷边器垫块 Gasket	1
48	40-1-46	卷边器螺钉 Screw	2


2. 上轴针杆分组件 Main shaft & needle bar components

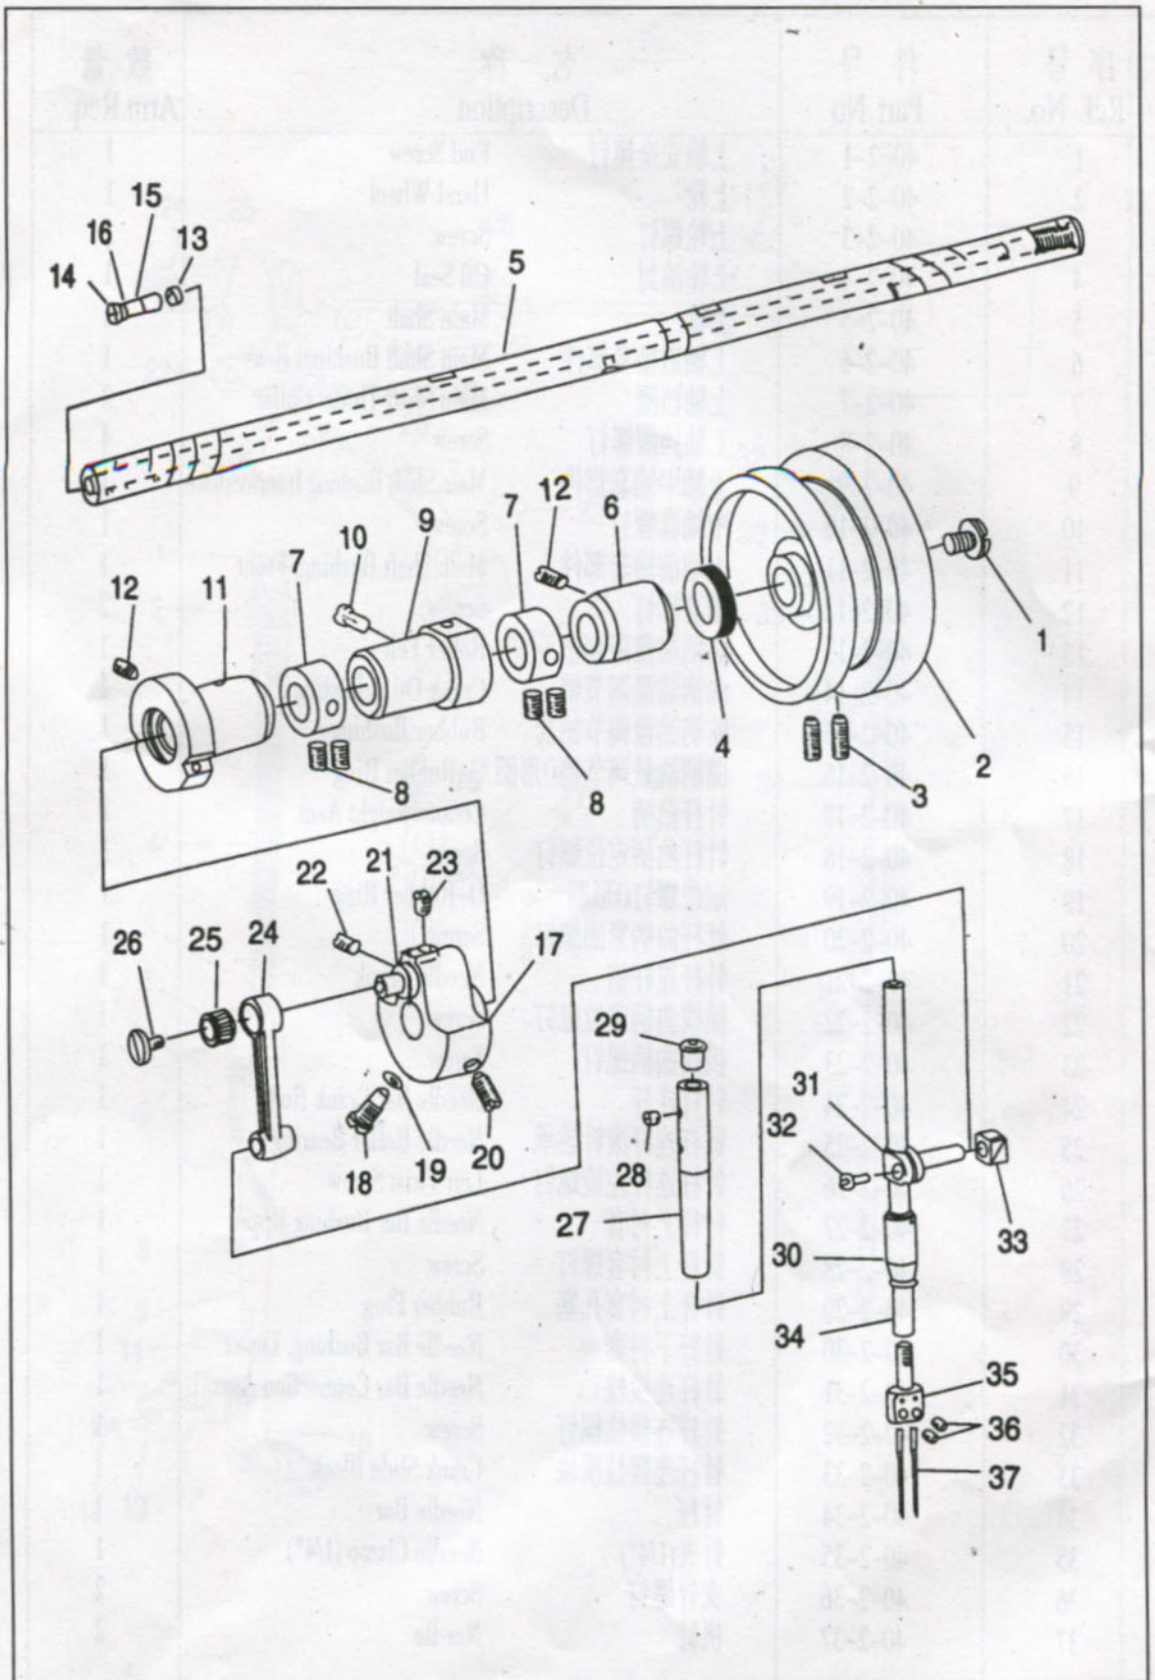

2. 上轴针杆分组件 Main shaft & needle bar components

序号 Ref. No.	件号 Part No	名称 Description	数量 Arm. Req.
1	40-2-1	上轴安全螺钉 End Screw	1
2	40-2-2	上轮 Hand Wheel	1
3	40-2-3	上轮螺钉 Screw	2
4	40-2-4	上轮油封 Oil Seal	1
5	40-2-5	上轴 Main Shaft	1
6	40-2-6	上轴后轴套部件 Main Shaft Bushing, Rear	1
7	40-2-7	上轴挡圈 Main Shaft Thrust Collar	2
8	40-2-8	上轴挡圈螺钉 Screw	4
9	40-2-9	上轴中轴套部件 Main Shaft Bushing Intermediate	1
10	40-2-10	中轴套螺钉 Screw	1
11	40-2-11	上轴前轴套部件 Main Shaft Bushing, Front	1
12	40-2-12	轴套螺钉 Screw	2
13	40-2-13	曲柄油量限制毡 Roller Felt	1
14	40-2-14	曲柄油量调节销 Crank Oil Adjusting Pin	1
15	40-2-15	曲柄油量调节销套 Rubber Bushing	1
16	40-2-16	曲柄油量调节销O形圈 O-Rubber Ring	1
17	40-2-17	针杆曲柄 Counterweight Asm.	1
18	40-2-18	针杆曲柄定位螺钉 Screw	1
19	40-2-19	定位螺钉O形圈 O-Rubber Ring	1
20	40-2-20	针杆曲柄紧固螺钉 Screw	1
21	40-2-21	针杆连杆销 Needle Crank	1
22	40-2-22	挑线曲柄定位螺钉 Screw	1
23	40-2-23	挑线曲柄螺钉 Screw	1
24	40-2-24	针杆连杆 Needle Bar Crank Rod	1
25	40-2-25	针杆连杆滚针轴承 Needle Rollar Bearing	1
26	40-2-26	针杆连杆左旋螺钉 Left Twist Screw	1
27	40-2-27	针杆上衬套 Needle Bar Bushing Upper	1
28	40-2-28	针杆上衬套螺钉 Screw	1
29	40-2-29	针杆上衬套孔塞 Rubber Plug	1
30	40-2-30	针杆下衬套 Needle Bar Bushing, Lower	1
31	40-2-31	针杆连接柱 Needle Bar Connection Asm.	1
32	40-2-32	针杆连接柱螺钉 Screw	1
33	40-2-33	针杆连接柱滑块 Crank Slide Block	1
34	40-2-34	针杆 Needle Bar	1
35	40-2-35	针夹(1/4") Needle Clamp (1/4")	1
36	40-2-36	支针螺钉 Screw	2
37	40-2-37	机针 Needle	2


3. 压料分组件 Presser bar components

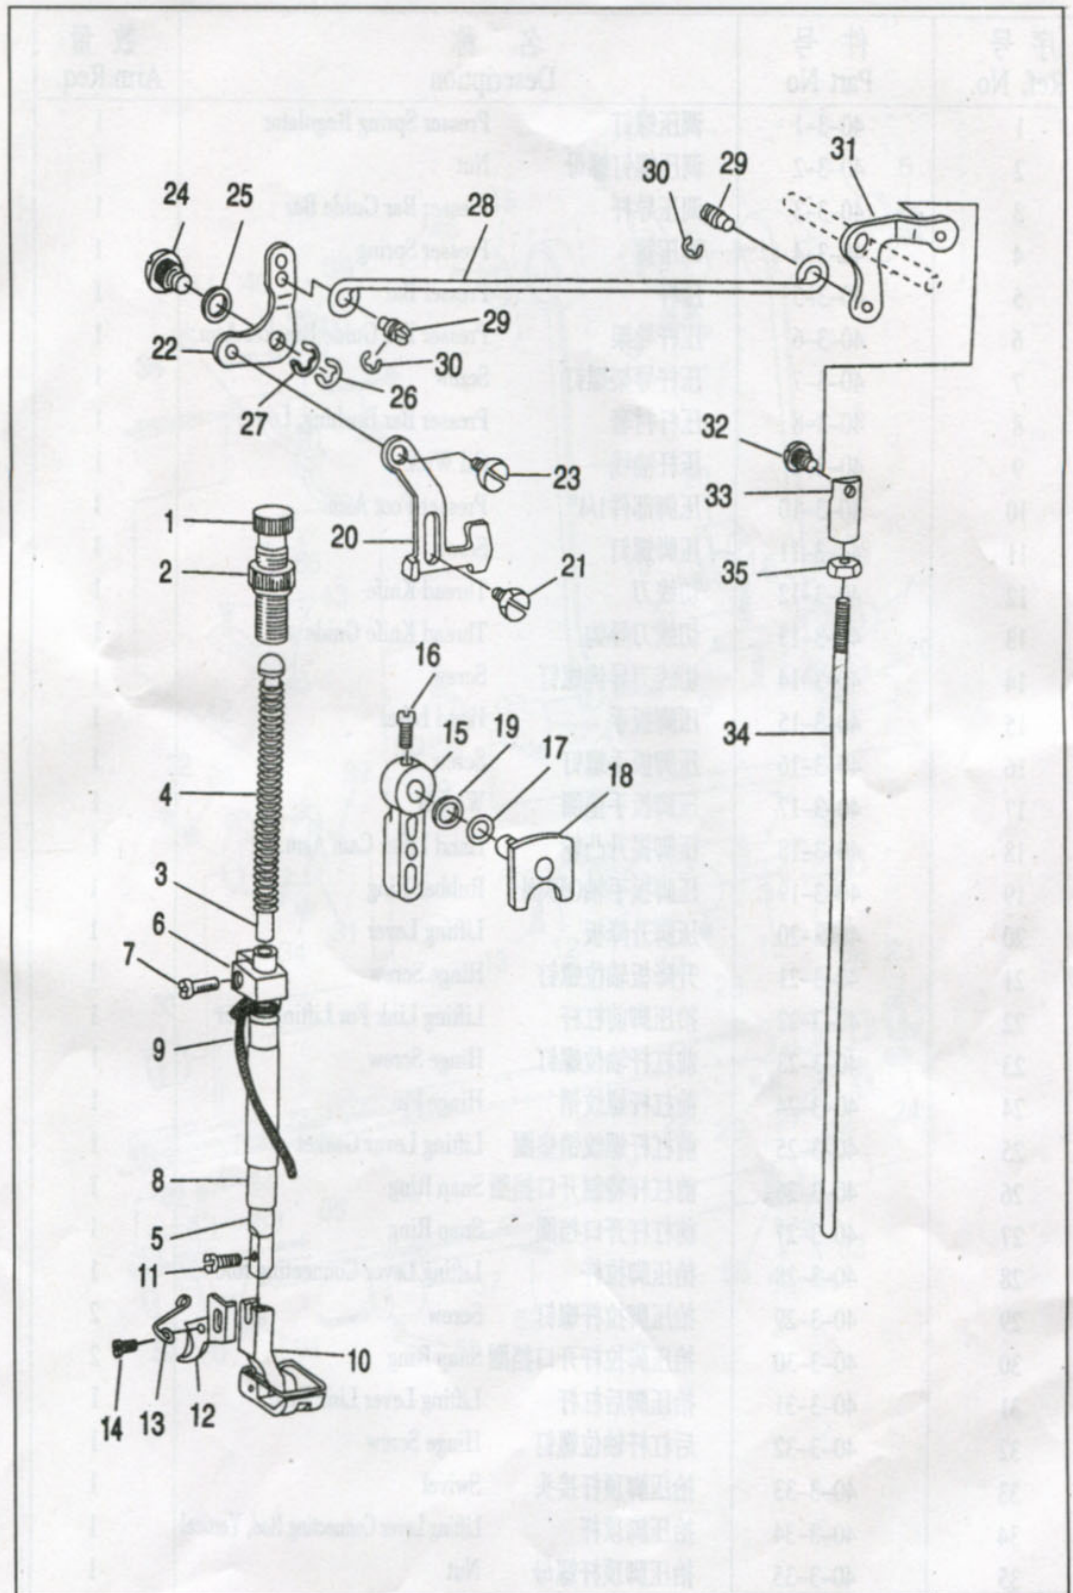

3. 压料分组件 Presser bar components

序号 Ref. No.	件号 Part No	名称 Description	数量 Arm.Req.
1	40-3-1	调压螺钉 Presser Spring Regulator	1
2	40-3-2	调压螺钉螺母 Nut	1
3	40-3-3	调压导杆 Presser Bar Guide Bar	1
4	40-3-4	调压簧 Presser Spring	1
5	40-3-5	压杆 Presser Bar	1
6	40-3-6	压杆导架 Presser Bar Guide Bracket Asm.	1
7	40-3-7	压杆导架螺钉 Screw	1
8	40-3-8	压杆衬套 Presser Bar Bushing, Lower	1
9	40-3-9	压杆油线 Oil Wick	1
10	40-3-10	压脚部件1/4" Presser Foot Asm.	1
11	40-3-11	压脚螺钉 Screw	1
12	40-3-12	切线刀 Thread Knife	1
13	40-3-13	切线刀导钩 Thread Knife Guide	1
14	40-3-14	切线刀导钩螺钉 Screw	1
15	40-3-15	压脚扳手 Hand Lifter	1
16	40-3-16	压脚扳手螺钉 Screw	1
17	40-3-17	压脚扳手垫圈 Washer	1
18	40-3-18	压脚提升凸轮 Hand Lifter Cam Asm.	1
19	40-3-19	压脚扳手轴O形圈 Rubber Ring	1
20	40-3-20	压脚升降板 Lifting Lever	1
21	40-3-21	升降板轴位螺钉 Hinge Screw	1
22	40-3-22	抬压脚前杠杆 Lifting Link For Lifting Lever	1
23	40-3-23	前杠杆轴位螺钉 Hinge Screw	1
24	40-3-24	前杠杆螺纹销 Hinge Pin	1
25	40-3-25	前杠杆螺纹销垫圈 Lifting Lever Gasket	1
26	40-3-26	前杠杆特制开口挡圈 Snap Ring	1
27	40-3-27	前杠杆开口挡圈 Snap Ring	1
28	40-3-28	抬压脚拉杆 Lifting Lever Connecting Rod	1
29	40-3-29	抬压脚拉杆螺钉 Screw	2
30	40-3-30	抬压脚拉杆开口挡圈 Snap Ring	2
31	40-3-31	抬压脚后杠杆 Lifting Lever Link Rear	1
32	40-3-32	后杠杆轴位螺钉 Hinge Screw	1
33	40-3-33	抬压脚顶杆接头 Swivel	1
34	40-3-34	抬压脚顶杆 Lifting Lever Connecting Rod, Vertical	1
35	40-3-35	抬压脚顶杆螺母 Nut	1


4. 送料分组件 Feed mechanism components

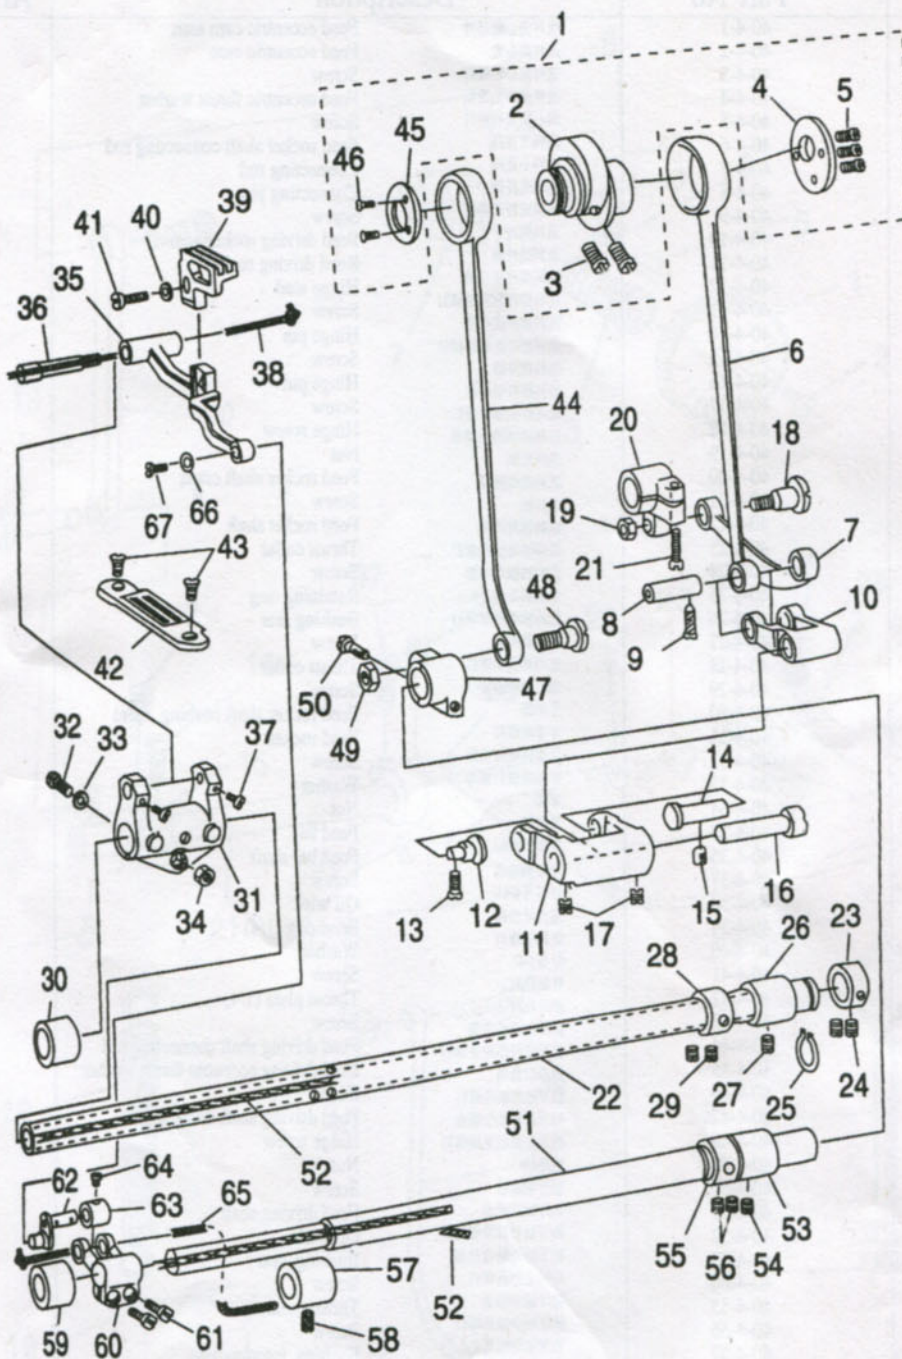

4. 送料分组件 Feed mechanism components


序号 Ref. No.	件号 Part No	名称 Description	数量 Arm. Req.
1	40-4-1	送料偏心轮部件	1
2	40-4-2	送料偏心轮	1
3	40-4-3	送料偏心轮螺钉	2
4	40-4-4	送料偏心轮盖板	1
5	40-4-5	偏心轮盖板螺钉	3
6	40-4-6	送料大连杆	1
7	40-4-7	送料小连杆	1
8	40-4-8	送料连杆销	1
9	40-4-9	送料连杆销螺钉	1
10	40-4-10	送料摆杆	1
11	40-4-11	送料摆杆座	1
12	40-4-12	送料摆杆座左销	1
13	40-4-13	送料摆杆座左销螺钉	1
14	40-4-14	送料摆杆座右销	1
15	40-4-15	送料摆杆座右销螺钉	1
16	40-4-16	送料摆杆销	1
17	40-4-17	送料摆杆销螺钉	1
18	40-4-18	送料曲柄轴位螺钉	2
19	40-4-19	送料曲柄轴位螺母	1
20	40-4-20	送料曲柄	1
21	40-4-21	送料曲柄螺钉	1
22	40-4-22	送料轴	1
23	40-4-23	送料轴薄挡圈	1
24	40-4-24	送料轴薄挡圈螺钉	1
25	40-4-25	送料轴轴用挡圈	2
26	40-4-26	送料轴后轴套	1
27	40-4-27	送料轴后轴套螺钉	1
28	40-4-28	送料轴挡圈	1
29	40-4-29	送料轴挡圈螺钉	1
30	40-4-30	送料轴前轴套	2
31	40-4-31	牙架座	1
32	40-4-32	牙架座螺钉	1
33	40-4-33	牙架座螺钉垫圈	1
34	40-4-34	牙架座螺钉螺母	1
35	40-4-35	牙架销	1
36	40-4-36	牙架销螺钉	1
37	40-4-37	牙架销油线	1
38	40-4-38	送料牙1/4"	2
39	40-4-39	送料牙垫圈	1
40	40-4-40	送料牙螺钉	1
41	40-4-41	针板1/4"	1
42	40-4-42	针板螺钉	1
43	40-4-43	拾牙连杆	1
44	40-4-44	拾牙连杆凸轮量	2
45	40-4-45	拾牙连杆凸轮量螺钉	1
46	40-4-46	拾牙后曲柄	1
47	40-4-47	拾牙连杆轴位螺钉	2
48	40-4-48	拾牙连杆轴位螺母	1
49	40-4-49	拾牙后曲柄紧固螺钉	1
50	40-4-50	拾牙轴	1
51	40-4-51	拾牙轴油线	1
52	40-4-52	拾牙轴后轴套	1
53	40-4-53	拾牙轴后轴套螺钉	2
54	40-4-54	拾牙轴后轴套挡圈	1
55	40-4-55	后轴套挡圈螺钉	1
56	40-4-56	拾牙轴中轴套	1
57	40-4-57	拾牙轴中轴套螺钉	2
58	40-4-58	拾牙轴前轴套	1
59	40-4-59	拾牙轴前轴套螺钉	1
60	40-4-60	拾牙轴前曲柄	1
61	40-4-61	拾牙轴前曲柄螺钉	1
62	40-4-62	牙架连杆	1
63	40-4-63	牙架连杆挡圈	1
64	40-4-64	牙架连杆挡圈螺钉	2
65	40-4-65	牙架连杆油线	1
66	40-4-66	牙架连杆轴孔垫圈	1
67	40-4-67	牙架连杆轴套螺钉	1
		针板1/8"	1
		针板5/32"	1
		针板3/16"	1

5. 送料调节分组件 Feed regulating components

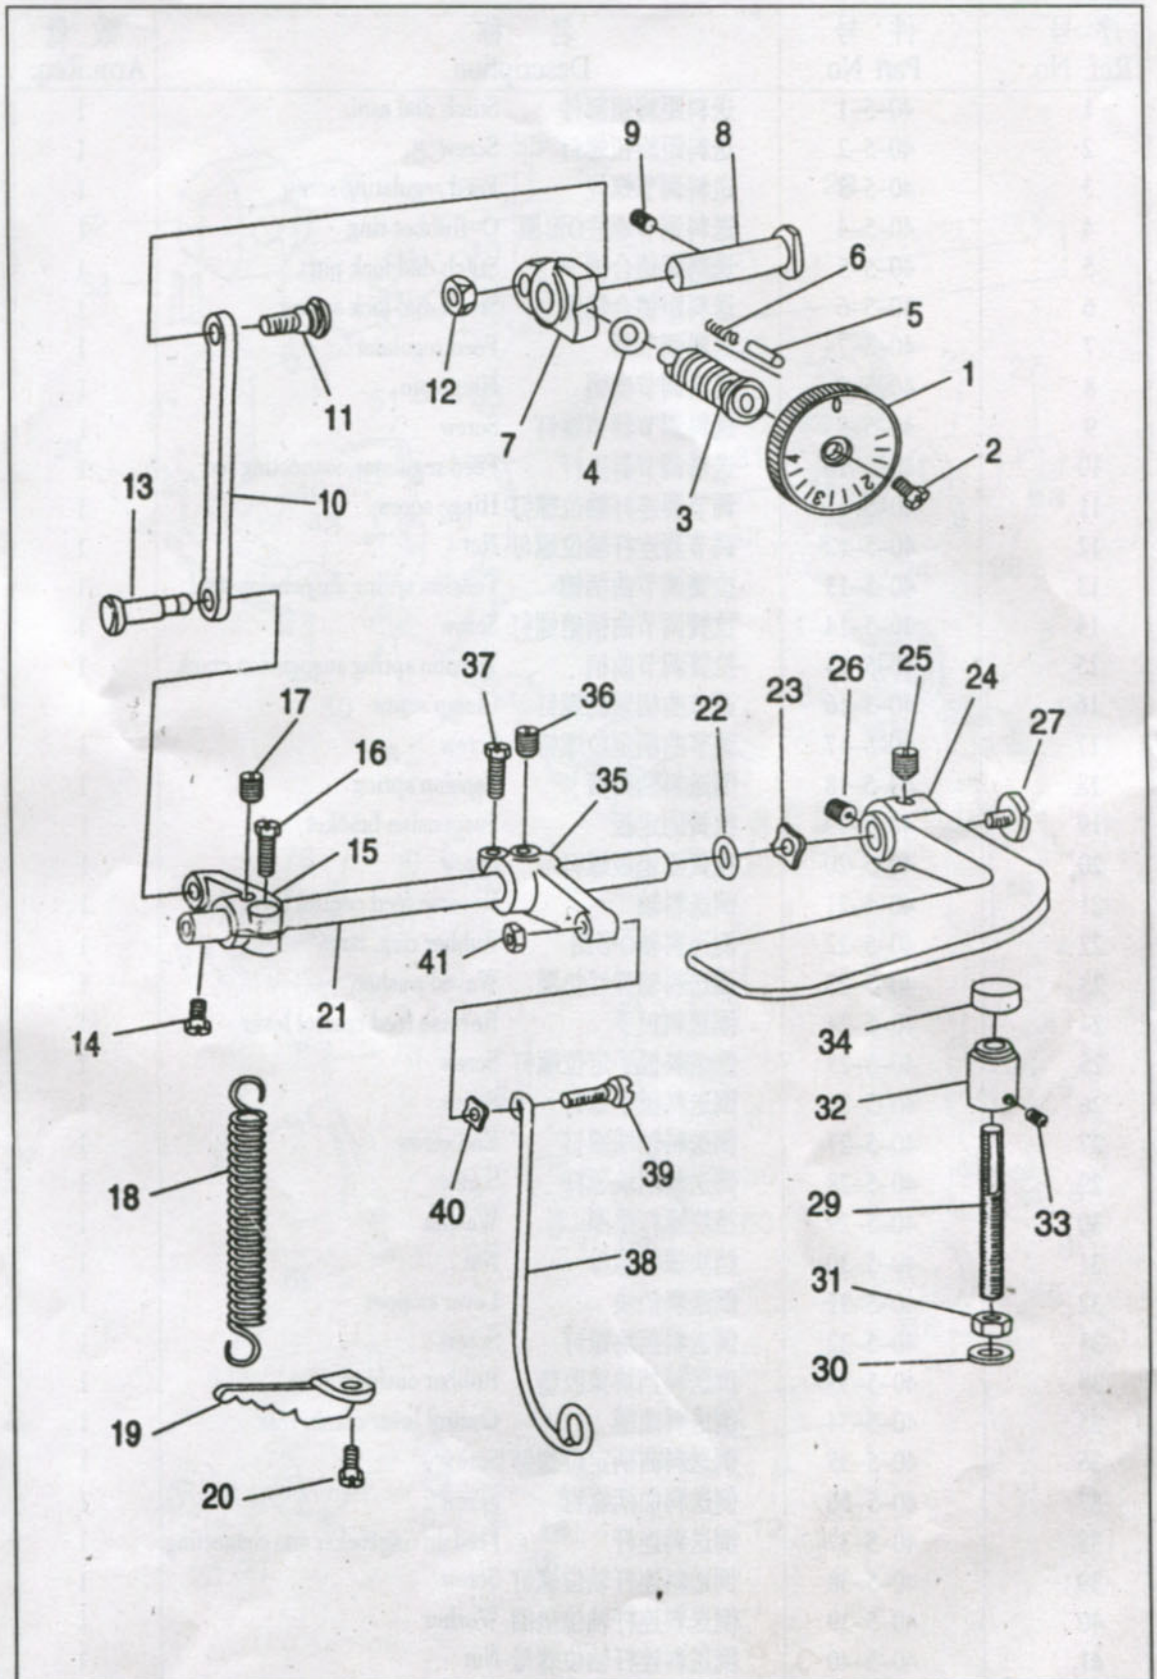

序号 Ref. No.	件号 Part No	名称 Description	数量 Arm. Req.
1	40-5-1	送料距旋钮部件 Stitch dial asm.	1
2	40-5-2	送料距旋钮螺钉 Screw	1
3	40-5-3	送料调节螺栓 Feed regulating screw	1
4	40-5-4	送料调节螺栓O形圈 O-Rubber ring	1
5	40-5-5	送料距锁合销 Stitch dial lock pin	1
6	40-5-6	送料距锁合销簧 Stitch dial lock spring	1
7	40-5-7	送料调节器 Feed regulator	1
8	40-5-8	送料调节器销 Hinge pin	1
9	40-5-9	送料调节器销螺钉 Screw	1
10	40-5-10	送料调节器连杆 Feed regulator connecting rod	1
11	40-5-11	调节器连杆轴位螺钉 Hinge screw	1
12	40-5-12	调节器连杆轴位螺母 Nut	1
13	40-5-13	拉簧调节曲柄销 Tension spring suspension stud	1
14	40-5-14	拉簧调节曲柄销螺钉 Screw	1
15	40-5-15	拉簧调节曲柄 Tension spring suspension crank	1
16	40-5-16	调节曲柄紧固螺钉 Clamp screw	1
17	40-5-17	调节曲柄定位螺钉 Screw	1
18	40-5-18	倒送料轴拉簧 Tension spring	1
19	40-5-19	拉簧固定板 Suspension bracket	1
20	40-5-20	拉簧固定板螺钉 Screw	1
21	40-5-21	倒送料轴 Reverse feed control lever shaft	1
22	40-5-22	倒送料轴O形圈 Rubber ring, large	1
23	40-5-23	倒送料轴弹性垫圈 Waved washer	1
24	40-5-24	倒送料扳手 Reverse feed control lever	1
25	40-5-25	倒送料扳手定位螺钉 Screw	1
26	40-5-26	倒送料扳手螺钉 Screw	1
27	40-5-27	倒送料轴端螺钉 End screw	1
29	40-5-28	倒送料挡块螺杆 Screw	1
30	40-5-29	挡块螺杆垫圈 Washer	1
31	40-5-30	挡块螺杆螺母 Nut	1
32	40-5-31	倒送料挡块 Lever stopper	1
33	40-5-32	倒送料挡块螺钉 Screw	1
34	40-5-33	倒送料挡块橡胶垫 Rubber cushion	1
35	40-5-34	倒送料曲柄 Control lever crank, rear	1
36	40-5-35	倒送料曲柄定位螺钉 Screw	1
37	40-5-36	倒送料曲柄螺钉 Screw	1
38	40-5-37	倒送料连杆 Feed driving rocker arm connecting	1
39	40-5-38	倒送料连杆轴位螺钉 Screw	1
40	40-5-39	倒送料连杆轴位垫圈 Washer	1
41	40-5-40	倒送料连杆轴位螺母 Nut	1


6. 弯针勾线分组件 Looper thread retainer components

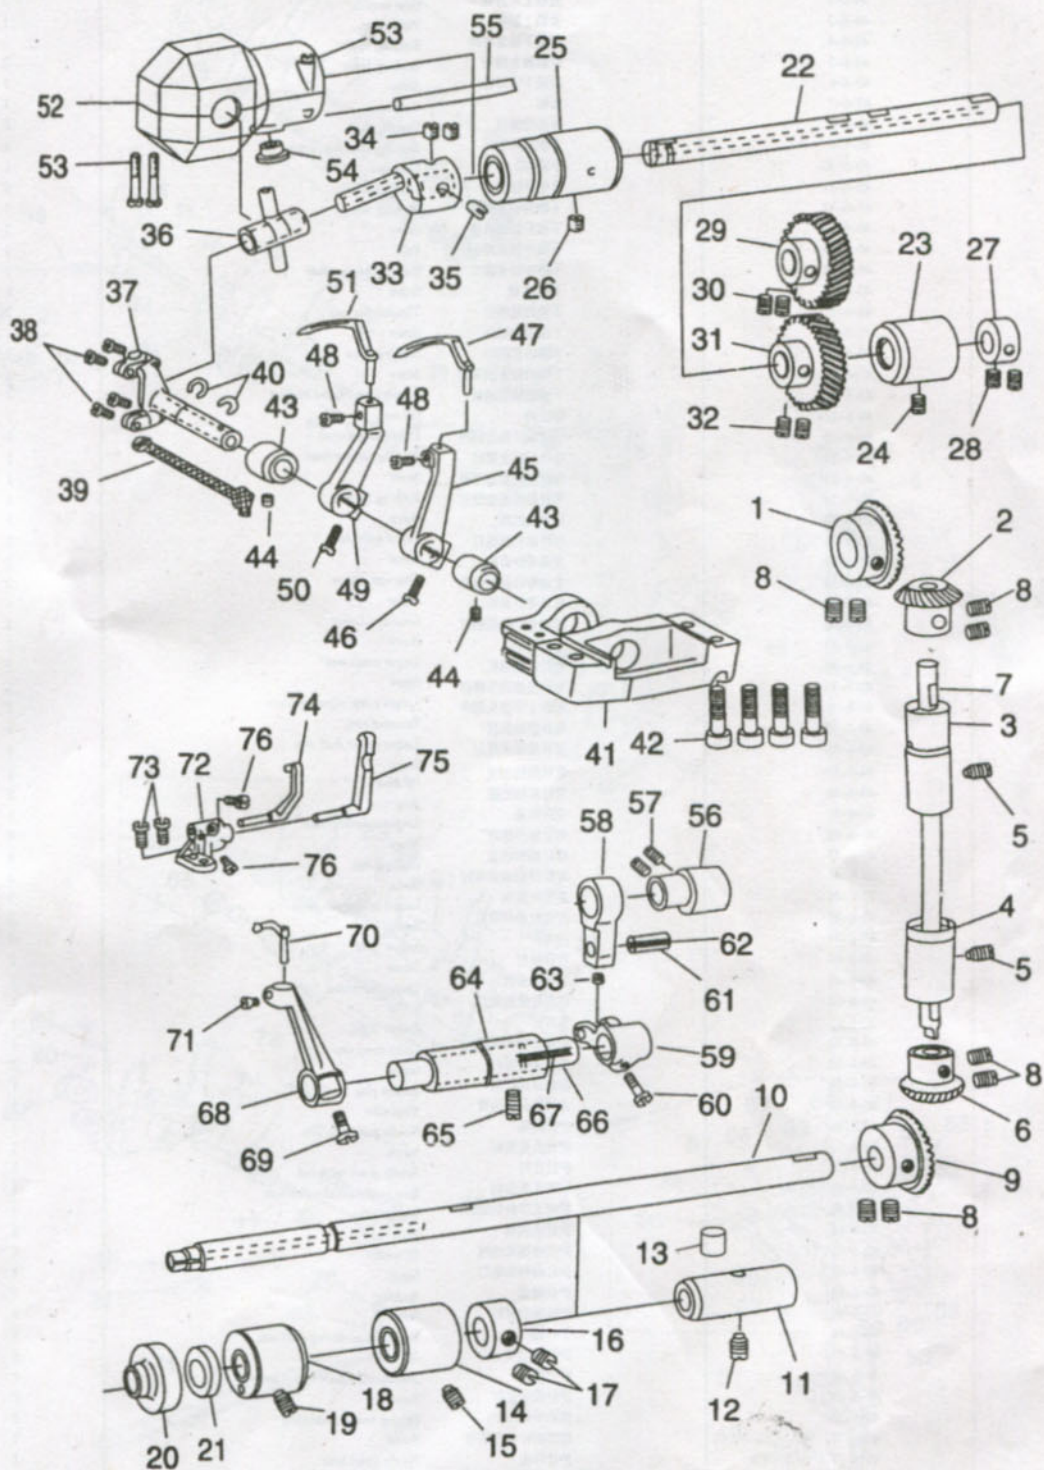

序号 Ref. No.	件号 Part No	名称 Description	数量 Arm. Req.
1	40-6-1	上轴伞齿轮	1
2	40-6-2	竖轴上伞齿轮	1
3	40-6-3	竖轴上轴套	1
4	40-6-4	竖轴下轴套部件	1
5	40-6-5	竖轴轴套螺钉	2
6	40-6-6	竖轴下伞齿轮	1
7	40-6-7	竖轴	1
8	40-6-8	伞齿轮螺钉	8
9	40-6-9	下轴伞齿轮	1
10	40-6-10	下轴	1
11	40-6-11	下轴后轴套	1
12	40-6-12	下轴后轴套螺钉	1
13	40-6-13	下轴后轴套油毡	1
14	40-6-14	下轴中轴套部件	1
15	40-6-15	下轴中轴套螺钉	1
16	40-6-16	下轴挡圈	1
17	40-6-17	下轴挡圈螺钉	2
18	40-6-18	下轴轴套部件	1
19	40-6-19	下轴轴套螺钉	1
20	40-6-20	下轴前轴套油封套	1
21	40-6-21	下轴前轴套油封	1
22	40-6-22	弯针轴	1
23	40-6-23	弯针轴后轴套部件	1
24	40-6-24	弯针后轴套螺钉	1
25	40-6-25	弯针轴前轴套部件	1
26	40-6-26	弯针轴前轴套螺钉	1
27	40-6-27	弯针轴挡圈	1
28	40-6-28	弯针轴挡圈螺钉	2
29	40-6-29	主动弯针齿轮	1
30	40-6-30	主动弯针齿轮螺钉	2
31	40-6-31	被动弯针齿轮	1
32	40-6-32	被动弯针齿轮螺钉	2
33	40-6-33	弯针曲柄	1
34	40-6-34	弯针曲柄螺钉	2
35	40-6-35	弯针曲柄调节螺钉	1
36	40-6-36	弯针十字接头部件	1
37	40-6-37	弯针摆轴部件	1
38	40-6-38	弯针摆轴盖螺钉	4
39	40-6-39	弯针摆轴油线	1
40	40-6-40	弯针摆轴挡圈	2
41	40-6-41	弯针架座	1
42	40-6-42	弯针架座螺钉	4
43	40-6-43	弯针摆轴轴套	2
44	40-6-44	弯针摆轴轴套螺钉	2
45	40-6-45	左弯针曲柄	1
46	40-6-46	左弯针曲柄螺钉	1
47	40-6-47	左弯针	1
48	40-6-48	弯针螺钉	2
49	40-6-49	右弯针曲柄	1
50	40-6-50	右弯针曲柄螺钉	1
51	40-6-51	右弯针	1
52	40-6-52	弯针曲柄罩壳部件	1
53	40-6-53	曲柄罩壳螺钉	3
54	40-6-54	曲柄罩壳孔塞	1
55	40-6-55	曲柄罩壳排油管	1
56	40-6-56	护针凸轮	1
57	40-6-57	护针凸轮螺钉	2
58	40-6-58	护针连杆	1
59	40-6-59	护针叉形曲柄	1
60	40-6-60	护针叉形曲柄螺钉	1
61	40-6-61	护针曲柄销	1
62	40-6-62	护针曲柄销油线	1
63	40-6-63	护针曲柄销螺钉	1
64	40-6-64	护针轴套	1
65	40-6-65	护针轴套螺钉	1
66	40-6-66	护针轴	1
67	40-6-67	护针轴油线	1
68	40-6-68	护针曲柄	1
69	40-6-69	护针曲柄螺钉	1
70	40-6-70	驱动护针(1/4")	1
71	40-6-71	驱动护针杆螺钉	1
72	40-6-72	护针杆座	1
73	40-6-73	护针杆座螺钉	2
74	40-6-74	左固定护针杆	1
75	40-6-75	右固定护针杆	1
76	40-6-76	左右固定护针杆螺钉	2

7. 挑线、松线、夹线分组件


Thread take-up, tension, and tension releasing assembly complete

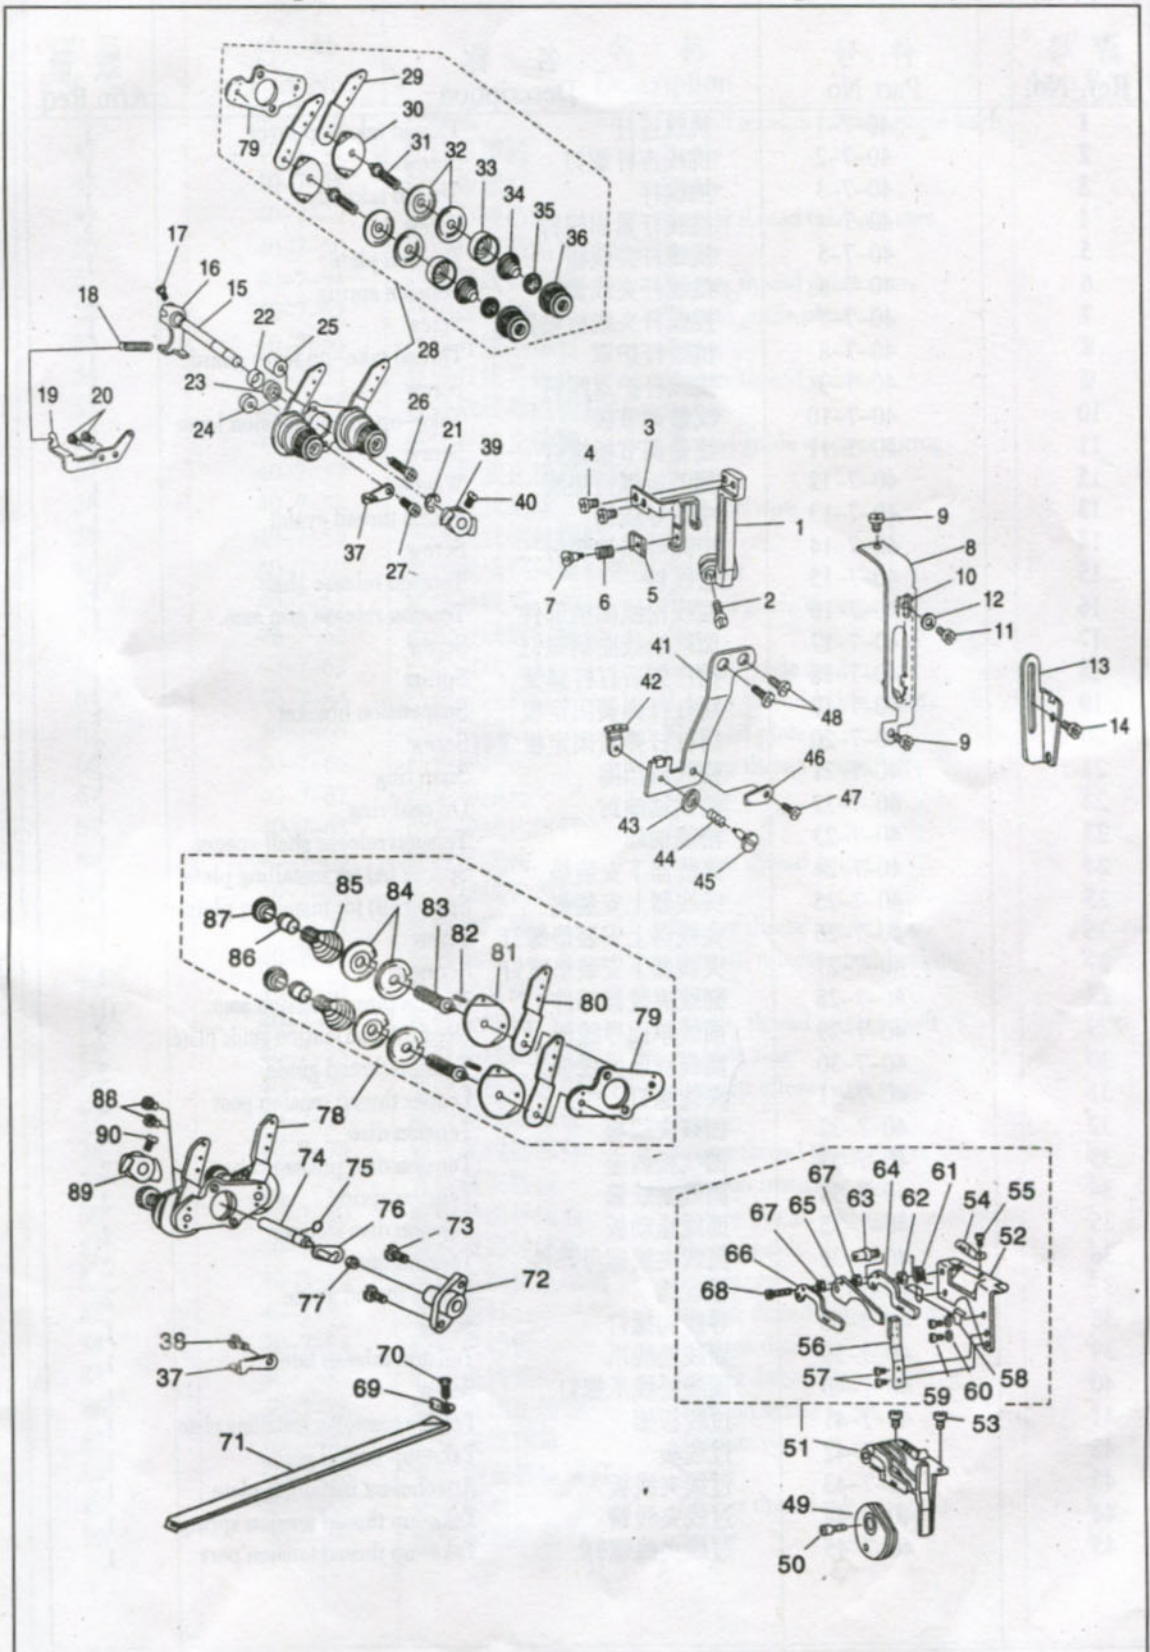

序号 Ref. No.	件号 Part No	名称 Description	数量 Arm. Req.
1	40-7-1	挑线连杆 Thread take-up lever	1
2	40-7-2	挑线连杆螺钉 Screw	1
3	40-7-3	挑线杆 Thread take-up	1
4	40-7-4	挑线杆紧固螺钉 Screw	2
5	40-7-5	挑线杆夹线板 Tension plate	1
6	40-7-6	挑线杆夹线簧 Tension spring	1
7	40-7-7	挑线杆夹线板轴螺钉 Screw	1
8	40-7-8	挑线杆护罩 Thread take-up lever guard	1
9	40-7-9	挑线杆护罩螺钉 Screw	2
10	40-7-10	线量调节板 Take-up thread tension lever	1
11	40-7-11	线量调节板螺钉 Screw	1
12	40-7-12	调节板螺钉垫圈 Washer	1
13	40-7-13	中间导线钩 Frame thread eyelet	1
14	40-7-14	中间导线钩螺钉 Screw	1
15	40-7-15	松线轴 Tension release shaft	1
16	40-7-16	面线松线曲柄部件 Tension release arm asm.	1
17	40-7-17	面线松线曲柄螺钉 Screw	1
18	40-7-18	抬压脚后杠杆弹簧 Spring	1
19	40-7-19	后杠杆弹簧固定板 Suspension bracket	1
20	40-7-20	后杠杆弹簧固定板螺钉 Screw	2
21	40-7-21	松线轴挡圈 Snap ring	1
22	40-7-22	松线轴油封 Oil seal ring	1
23	40-7-23	松线轴环 Tension release shaft spacer	1
24	40-7-24	夹线器下安装垫 Spacer (A) for installing plate	1
25	40-7-25	夹线器上安装垫 Spacer (B) for installing plate	1
26	40-7-26	夹线器上安装垫螺钉 Screw	1
27	40-7-27	夹线器下安装垫螺钉 Screw	1
28	40-7-28	面线夹线器部件 Needle thread tension asm.	(1)
29	40-7-29	面线单面导线板 Needle thread tension guide plate	2
30	40-7-30	面线双面导线板 Tension thread guide	2
31	40-7-31	夹线螺钉 Looper thread tension post	2
32	40-7-32	面线夹线板 Tension disc	4
33	40-7-33	面线松线座 Tension disc presser tube	2
34	40-7-34	面线夹线簧 Tension spring	2
35	40-7-35	面线止动板 Tension disc stopper	2
36	40-7-36	面线夹线螺母部件 Tension nut	2
37	40-7-37	导线钩 Frame thread guide	2
38	40-7-38	导线钩螺钉 Screw	1
39	40-7-39	面线松线爪 Tension release latch	1
40	40-7-40	面线松线爪螺钉 Screw	1
41	40-7-41	过线板架 Tension controller installing plate	1
42	40-7-42	过线板 Take-up thread guide	1
43	40-7-43	过线夹线板 Attachment installing plate	1
44	40-7-44	过线夹线簧 Take-up thread tension spring	1
45	40-7-45	过线夹线螺钉 Take-up thread tension port	1


序 号 Ref. No.	件 号 Part No	名 称 Description	数 量 Arm. Req.
46	40-7-46	松线板 Thread tension release guide latch	1
47	40-7-47	松线板螺钉 Screw	1
48	40-7-48	过线板螺钉 Screw	2
49	40-7-49	底线打线凸轮 Looper thread take-up cam	1
50	40-7-50	底线打线凸轮定位螺钉 Screw	1
51	40-7-51	凸轮导线钩部件 Looper thread guide asm.	1
52	40-7-52	凸轮导线架 Thread guide plate	1
53	40-7-53	凸轮导线架螺钉 Screw	2
54	40-7-54	底线双线导线钩 Looper thread guide	1
55	40-7-55	底线双线导线钩螺钉 Screw	1
56	40-7-56	底线导线止动簧 Thread guide stopper spring	1
57	40-7-57	底线导线止动簧螺钉 Screw	2
58	40-7-58	底线脱线钢丝 Cast-off wire	1
59	40-7-59	底线脱线钢丝螺钉 Screw	2
60	40-7-60	底线脱线钢丝螺钉垫圈 Washer	2
61	40-7-61	底线导线簧 Thread guide spring	1
62	40-7-62	凸轮过线螺钉螺母 Nut	1
63	40-7-63	凸轮过线螺钉 Thread guide stud	1
64	40-7-64	凸轮导线钩(右) Looper thread guide, right	1
65	40-7-65	凸轮脱线爪 Cast-off plate	1
66	40-7-66	凸轮导线钩(左) Looper thread guide, left	1
67	40-7-67	凸轮导线环 Collar	2
68	40-7-68	凸轮导线钩螺钉 Screw	1
69	40-7-69	底线导线钩 Looper thread guide	1
70	40-7-70	底线导线钩螺钉 Screw	1
71	40-7-71	底线导线管 Looper thread guide tube	1
72	40-7-72	松线轴套 Tension release shaft bushing	1
73	40-7-73	松线轴套螺钉 Screw	2
74	40-7-74	底线松线轴 Looper thread release shaft	1
75	40-7-75	底线松线轴O型圈 Rubber ring	1
76	40-7-76	底线松线轴曲柄部件 Tension release arm asm.	1
77	40-7-77	底线松线轴螺母 Nut	1
78	40-7-78	底线夹线器部件 Lower thread tension asm.	(1)
79	40-7-79	夹线器安装板 Tension installing plate	2
80	40-7-80	底线单面导线板 Looper thread tension control plate	2
81	40-7-81	底线双面导线板 Thread guide	2
82	40-7-82	底线夹线板止动销 Spring pin	2
83	40-7-83	夹线螺钉 Looper thread tension post	2
84	40-7-84	底线夹线板 Tension disc	4
85	40-7-85	底线夹线簧 Looper thread tension spring	2
86	40-7-86	底线夹线止转圈 Tension spring bushing	2
87	40-7-87	底线夹线螺母 Tension post nut	2
88	40-7-88	夹线器安装板螺钉 Screw	2
89	40-7-89	底线松线爪 Looper thread release latch	1
90	40-7-90	底线松线爪螺钉 Screw	1

8. 润滑分组件 Lubrication

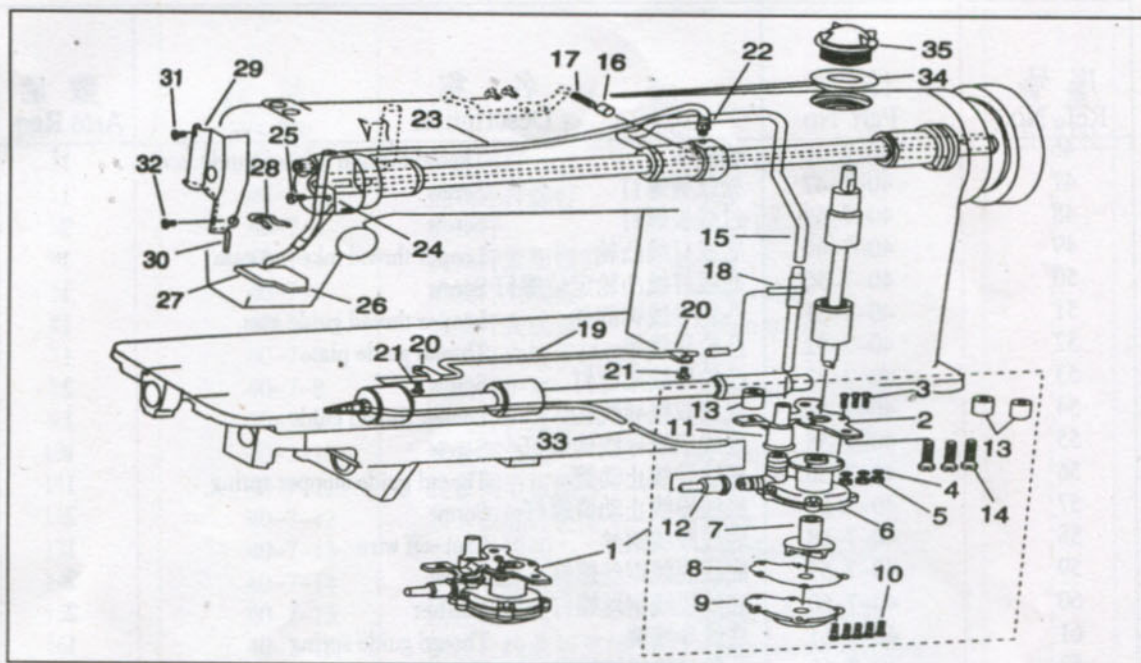


序号 Ref. No.	件号 Part No	名称 Description	数量 Arm. Req.
1	40-8-1	油泵部件	(1)
2	40-8-2	油泵安装板	1
3	40-8-3	油泵安装螺钉	3
4	40-8-4	油泵安装垫圈	3
5	40-8-5	油泵安装螺母	3
6	40-8-6	油泵体	1
7	40-8-7	油泵叶轮	1
8	40-8-8	油泵叶轮托板	1
9	40-8-9	油泵盖部件	1
10	40-8-10	油泵盖螺钉	5
11	40-8-11	上轴供油管接头	1
12	40-8-12	下轴供油管接头	1
13	40-8-13	油泵垫圈	3
14	40-8-14	油泵螺钉	3
15	40-8-15	上轴供油管	1
16	40-8-16	回油泵柱塞	1
17	40-8-17	柱塞簧	1
18	40-8-18	齿轮供油管橡皮接头	1
19	40-8-19	齿轮供油管	1
20	40-8-20	齿轮供油管夹	2
21	40-8-21	齿轮供油管夹螺钉	2
22	40-8-22	面部回油管连接螺钉	1
23	40-8-23	回油管	1
24	40-8-24	回油管夹	1
25	40-8-25	回油管夹螺钉	1
26	40-8-26	回油除尘毡	1
27	40-8-27	回油毡	1
28	40-8-28	回油毡夹	1
29	40-8-29	面部挡油板	1
30	40-8-30	面部挡油板油线	1
31	40-8-31	面部挡油板上螺钉	1
32	40-8-32	面部挡油板下螺钉	1
33	40-8-33	下轴供油管	1
34	40-8-34	油窗O形圈	1
35	40-8-35	油窗	1

9. 油盘、膝抬压脚分组件 Oil reservoir & knee lifter components

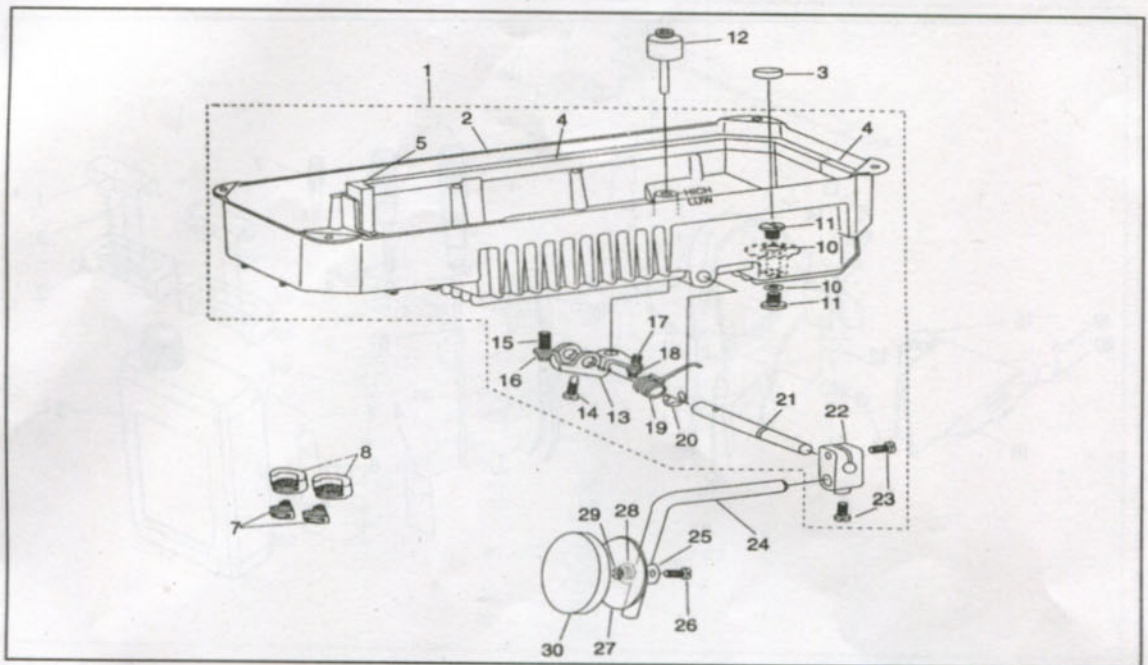


序号 Ref. No.	件号 Part No	名称 Description	数量 Arm. Req.
1	40-9-1	油盘部件 Oil reservoir asm.	(1)
2	40-9-2	油盘 Oil reservoir	1
3	40-9-3	油盘磁铁 Oil reservoir magnet	1
4	40-9-4	油盘侧面垫 Gasket	2
5	40-9-5	油盘端面垫 Gasket	1
7	40-9-6	油盘座垫 Oil reservoir felt cushion	2
8	40-9-7	油盘支座 Oil reservoir rubber cushion	2
10	40-9-8	排油螺钉O形圈 Oil drain cap gasket	2
11	40-9-9	排油螺钉 Oil drain screw	2
12	40-9-10	抬压脚顶销 Knee press lifter rod	1
13	40-9-11	抬压脚双向曲柄 Lifting	1
14	40-9-12	双向曲柄螺钉 Positioning screw	1
15	40-9-13	双向曲柄限位螺钉 Positioning screw	1
16	40-9-14	双向曲柄限位螺母 Nut	1
17	40-9-15	双向曲柄调节螺钉 Positioning screw	1
18	40-9-16	双向曲柄调节螺母 Nut	1
19	40-9-17	双向曲柄扭簧 Spring	1
20	40-9-18	抬压脚轴开口挡圈 Thrust ring	1
21	40-9-19	抬压脚轴 Knee press rod	1
22	40-9-20	抬压脚操纵杆节头 Bearing bracket	1
23	40-9-21	操纵杆节头螺钉 Clamp screw	2
24	40-9-22	操纵杆 Knee lifter plate rod	1
25	40-9-23	操纵板节头 Knee press plate cover joint	1
26	40-9-24	操纵板节头螺钉 Screw	1
27	40-9-25	操纵板 Knee press plate	1
28	40-9-26	操纵板簧 Knee press plate spring	1
29	40-9-27	操纵板螺钉 Screw	1
30	40-9-28	操纵板软垫 Knee press plate cover	1

10. 机头附件 Machine head accessories

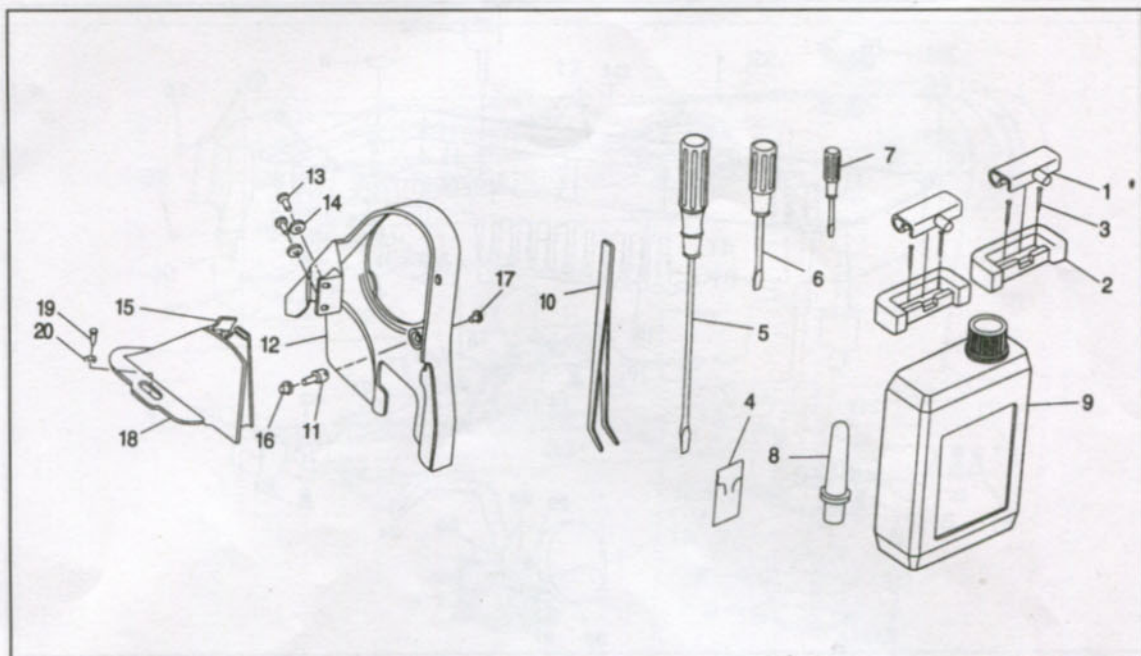

序 号 Ref. No.	件 号 Part No	名 称 Description		数 量 Arm. Req.
1	40-10-1	机头连接钩部件	Machine hinge plate asm.	2
2	40-10-2	机头连接钩座	Machine hinge plate	2
3	40-10-3	机头连接钩座钉	Nail	4
4	40-10-4	机针	Needle	1包
5	40-10-5	螺丝刀(大)	Screw driver (L)	1
6	40-10-6	螺丝刀(中)	Screw driver (M)	1
7	40-10-7	螺丝刀(小)	Screw driver (S)	1
8	40-10-8	机头支柱	Machine rest pin	1
9	40-10-9	油箱部件	Lubricating unit case asm.	1
10	40-10-10	镊子	Tweezer	1
11	40-10-11	罩壳支柱	Belt cover support stud	1
12	40-10-12	上轮前罩壳	Belt-cover A	1
13	40-10-13	罩壳螺钉	Screw	2
14	40-10-14	罩壳螺钉垫圈	Washer	2
15	40-10-15	后罩壳盖	Belt-cover b cover asm.	1
16	40-10-16	罩壳支柱螺母	Nut	1
17	40-10-17	前罩壳紧固螺钉	Screw	1
18	40-10-18	上轮后罩壳	Belt-cover B	1
19	40-10-19	传动带罩壳木螺钉	Driving belt cover wood screw	2
20	40-10-20	罩壳木螺钉垫圈	Wood screw washer	2

11. 四线团架分组件 Quadruple-thread spool stand asm.

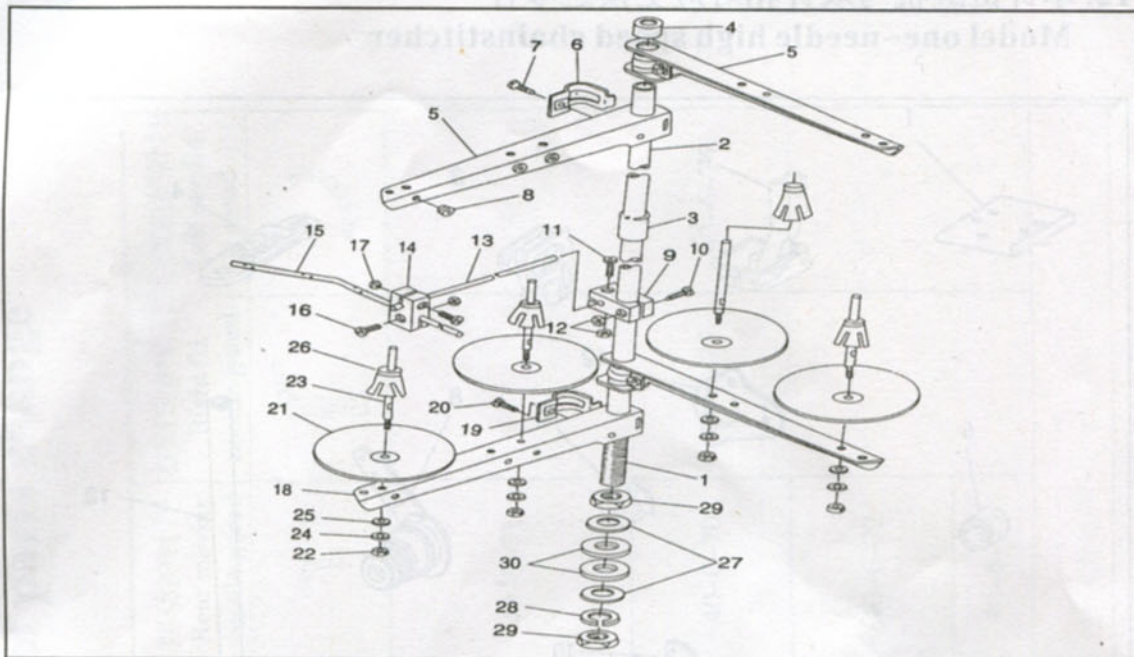


序号 Ref. No.	件号 Part No	名称 Description	数量 Arm.Req.
1	40-11-1	线架杆下节	1
2	40-11-2	线架杆上节	1
3	40-11-3	线架杆接头	1
4	40-11-4	线架杆预防护橡皮	1
5	40-11-5	线架过线杆	2*
6	40-11-6	线架过线夹	2*
7	40-11-7	线架过线夹螺钉	2*
8	40-11-8	导线圈	6**
9	40-11-9	线架导线杆夹	1
10	40-11-10	线架导线杆夹螺钉(A)	1
11	40-11-11	线架导线杆夹螺钉(B)	1
12	40-11-12	线架导线杆夹螺母	2
13	40-11-13	线架导线杆	1
14	40-11-14	线架导线杆过线夹	1
15	40-11-15	线架导线杆过线	1
16	40-11-16	线架导线杆过线夹螺钉	2
17	40-11-17	线架导线杆过线夹螺母	2
18	40-11-18	线盘架	2*
19	40-11-19	线盘架夹	2*
20	40-11-20	线盘架夹螺钉	2*
21	40-11-21	线盘	4***
22	40-11-22	线盘钉螺母	4***
23	40-11-23	线盘钉	4***
24	40-11-24	线盘钉弹簧垫圈	4***
25	40-11-25	线盘钉垫圈	4***
26	40-11-26	线团防松垫	4
27	40-11-27	线架杆紧固螺母垫圈	2
28	40-11-28	紧固螺母弹簧垫圈	1
29	40-11-29	线架杆紧固螺母	2
30	40-11-30	线架杆防震橡皮圈	2

注：单针缝线机配二线团线架，三针缝线机配六线团线架。 - 31 -

12. 单针链缝机与双针相对应更换之零件

Model one-needle high speed chainstitcher

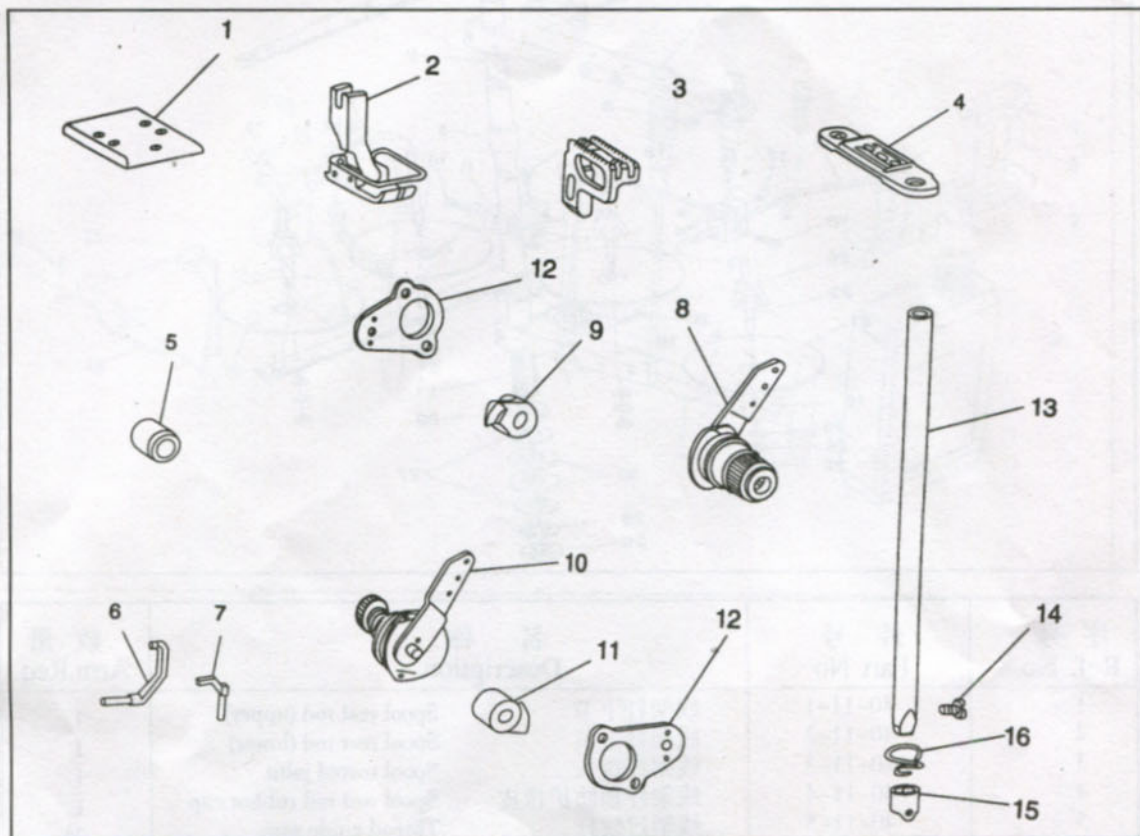

序号 Ref. No.	件号 Part No	名称 Description	数量 Arm. Req.
1	40-12-1	附件安装板 Attachment installing plate	1
2	40-12-2	压脚部件 Presser foot asm.	1
3	40-12-3	送料牙 Feed dog	1
4	40-12-4	针板 Throat plate	1
5	40-12-5	弯针曲柄挡圈 Throat collar	1
6	40-12-6	摆动护针杆 Driving needle guard	1
7	40-12-7	固定护针杆 Counter needle guard	1
8	40-12-8	面线夹线器部件 Needle thread tension asm.	1
9	40-12-9	面线松线爪 Tension release latch	1
10	40-12-10	底线夹线器部件 Lower thread tension asm.	1
11	40-12-11	底线松线爪 Looper thread release latch	1
12	40-12-12	夹线器安装板 Tension installing plate	2
13	40-12-13	针杆 Needle bar	1
14	40-12-14	支针螺钉 Screw	1
15	40-12-15	针杆线钩 Needle bar thread guide	1
16	40-12-16	针杆下衬套线钩 Thread guide	1

双针双列与双针单列对应零件变化表 List of parts change

双针双列 Two-needle double-row chain stitch:

规格 Specifications		针板 Throat plate	针夹 Needles clamp	压脚 Presser foot asm.	送料牙 Feed dog	摆动护针杆 Rear moving needle guard	右固定护针杆 Right fix needle guard	左固定护针杆 Left needle guard
*1	1/8"(3.2mm)	40-4-68	40-2-38					
2	5/32"(4.0mm)	40-4-69	40-2-39					
3	3/16"(4.8mm)	40-4-70	40-2-40	40-3-38	40-4-77	40-6-71	40-6-75	40-6-74
4	7/32"(5.6mm)	40-4-71	40-2-41	40-3-39	40-4-39			
5	1/4"(6.4mm)	40-4-42	40-2-35	40-3-10		40-4-78	40-6-72	
6	5/16"(7.9mm)	40-4-72	40-2-42	40-3-40	40-4-79			40-6-73
7	3/8"(9.5mm)	40-4-73	40-2-43	40-3-41		40-4-80	40-6-73	
8	1/2"(12.7mm)	40-4-74	40-2-44	40-3-42				

双针单列 Two-needle double-line chain stitch:

9	0	40-4-75	40-2-45	40-3-43	40-4-81	40-6-74	40-6-77
---	---	---------	---------	---------	---------	---------	---------

双针双列、双针单列附件一览表 List throat of & its accessories


双针双列 Two-needle double-row chain stitch

名称 Name		右弯针 Right looper	左弯针 Left looper	推板 Bed slide	凸轮盖 Cam cover	卷边器 Folder
规格 Specifications						
*1	1/8"(3.2mm)	40-6-51	40-6-47	40-1-25	40-1-18	40-1-47
2	5/32"(4.0mm)					40-1-48
3	3/16"(4.8mm)					40-1-49
4	7/32"(5.6mm)					40-1-50
5	1/4"(6.4mm)					40-1-44
6	5/16"(7.9mm)					40-1-51
7	3/8"(9.5mm)					40-1-52
8	1/2"(12.7mm)			40-1-47	40-1-50	

双针单列 Two-needle double-line chain stitch

9	0	40-6-78	40-6-79	40-1-48	40-1-51
---	---	---------	---------	---------	---------

15. 三针链缝机与双针相对应更换之零件 Model three-needle high speed chainstitcher

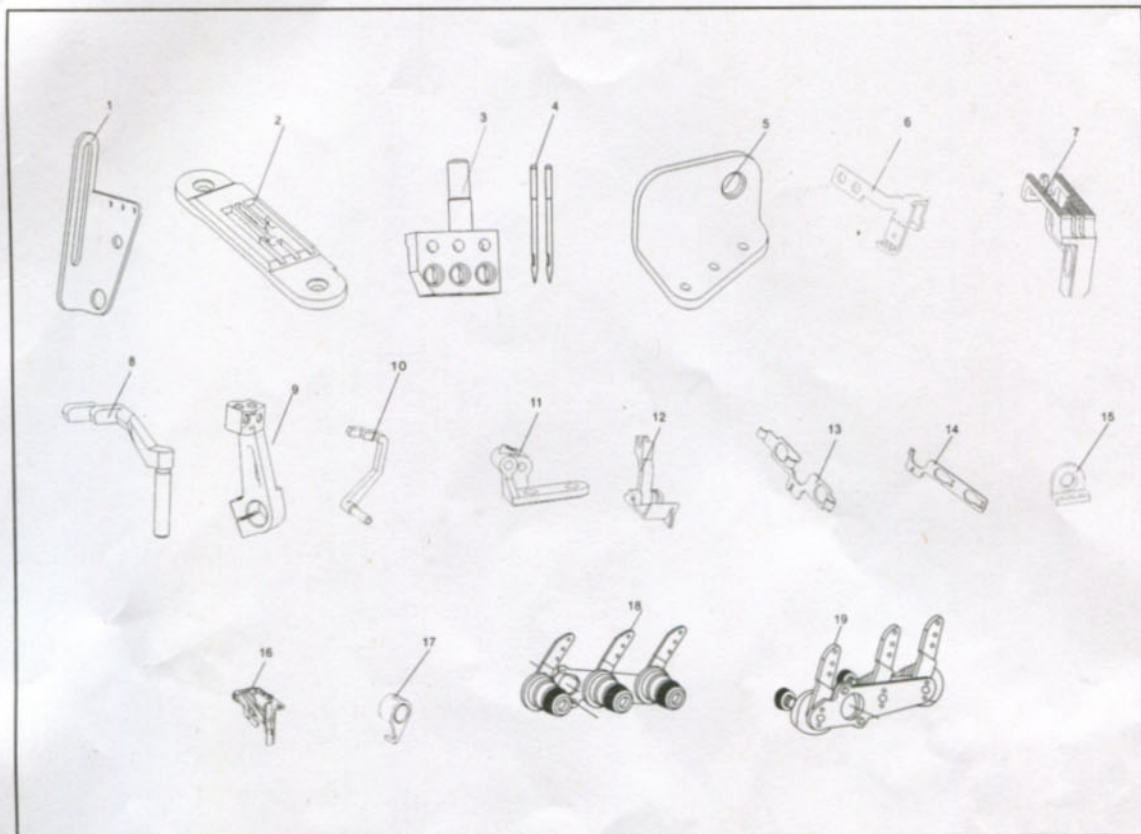

序号 Ref. No.	件号 Part No	名称 Description	数量 Arm.Req.
1	48-1-1	中间导线钩	1
2	48-1-2	针板	1
3	48-2-1	针夹	1
4	48-2-2	机针18#	1
5	48-2-3	针线过线架	1
6	48-2-4-1	挑线杆	1
7	45-3-1-1	送料牙	1
8	48-4-1	摆动护针1/4	1
9	48-4-2	左弯针曲柄	1
10	48-4-3	固定护针杆	1
11	48-4-4	护针杆座	1
12	48-6-1	压脚组件	1
13	48-7-2	底线松线板	1
14	48-7-3	面线松线板	1
15	48-7-4	底线导线钩	1
16	48-7-5	凸轮导线钩部件	1
17	48-7-6	松线曲柄组件	1
18	48-7-7	面线夹线器部件	1
19	48-7-8	底线夹线器部件	1